

XL SERIES PRINTERS

Setting Value Features

The following example shows how to use the operator panel to program the right margin.

1. Press the Off line key to take the printer off line.
2. Press the Enter Setup key to enter the setup mode.
3. Press the Display until 6 (the feature we wish to change) shows in the display.
4. Press the Feature Value to Display the current right margin setting.
5. Use the Display or Display keys to select the value required for the application. For example Display from the default value 132 to 85 for 8.5 inch paper if you are using a 10 CPI font.
6. Press Set to save the value you have selected.
7. If you wish to change another feature, press the Feature key and follow steps 3 through 7 for each value feature to be changed.
8. Press the Exit Setup key to exit setup mode.
9. Press On Line to resume normal operation.

The above example depicts the appropriate procedure for programming features 1 through 26. A description of all value features and instructions on how to program each are given below.

NOTE:

For future reference, record the setting of each value feature in Appendix F, or print a feature listing via feature 98.

NOTE:

To view or change any feature, the printer must be off line and in setup mode.

Setting Discrete Features

Features 27 through 99 require an ON/OFF or ENABLE/DISABLE condition setting. These are referred to as Discrete features. The programming procedure basically the same as that for value features except no numeric value is required. Instead, an ON or ENABLE condition is selected by pressing the Set key. A "1" displayed in the digital display indicates an ON condition. An OFF or DISABLE condition is selected by pressing the Clear key. A "0" displayed in the digital display indicates an OFF condition. The following example shows how to use the operator panel to enable the Bar Code enable (Feature 70) and to clear Power up on line (Feature 42).

1. Press the Off line key to take the printer off line.
2. Press the Enter Setup key to enter the setup mode.
3. Press the Display key until the display shows "70 0" (the feature we wish to change).

NOTE:

If the user inadvertently advances beyond the desired number, the digital display may be decremented by pressing the Display key.

1. Press the Set key. The display will show "70 1". This means that this feature is enabled.
2. If you wish to change another feature, press Display or Display until the desired feature number is displayed. In this example, press Display until the display shows "42 1". Press the Clear key. The display will show "42 0". This means that the feature is disabled.
3. Press Exit Setup to exit setup mode.
4. Press On Line to continue normal operation.

The above example depicts the appropriate procedure for programming features 27 through 99. A description of all discrete features which are available and instructions on how to program each follows.

NOTE:

For future reference, record the setting for each discrete feature in Appendix F, or print a feature listing via feature 98.